


haid-tec accessories for i-mop Lite



Shown as an example on i-mop XL

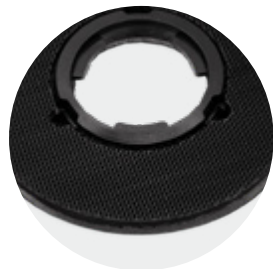


Robust driving plate with Velcro



Easy to mount on a driving disc




Velcro back

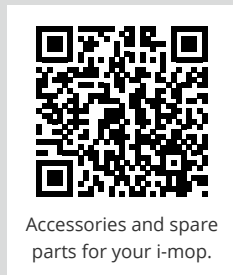

Accessories and spare parts for your i-mop.

haid-tec products for i-mop Lite

1

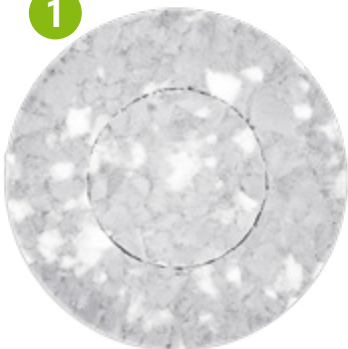

1 MelaminePlusPad with cut-out

2



2 PolyPlusPads with high-quality outer band

3



3 i-mop Lite drive plate


4




4 Spare suction lips front and rear

Upgrade - from brush to MelaminPlusPad

Using the i-mop XL as an example

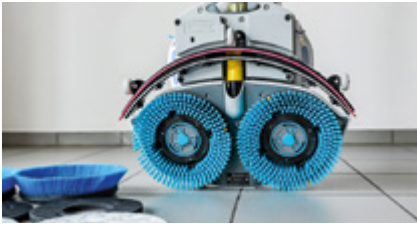

To convert, bring the i-mop into the upright position.

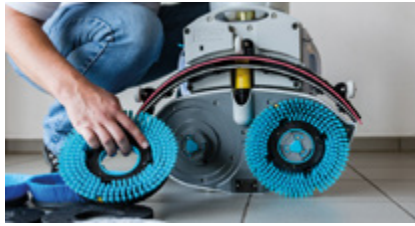

First remove the brushes. To do this, move the brush discs jerkily in the direction of travel.




Secondly, insert the pre-wetted MelaminPlusPads into the trays.



Mount the traction plates against the direction of travel until they engage.



Your i-mop is now ready to be converted. Get started now and achieve better cleaning results!

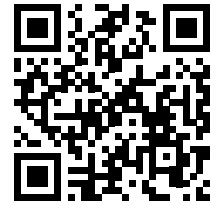

You can watch a short video on YouTube about the upgrade of your i-mop.

Replacing the worn suction lips



Remove the suction bar from your i-mop.



Remove coarse soiling.



Loosen the screw connections of the suction bar.



Disassemble the suction bar.



Replace the worn suction lip with a new one. Note the different lengths of the screws.



Assemble the squeegee and fit it back onto your i-mop.

Your contact for certified floor cleaning



Thomas Haid-Thoma (left) and David Haid

haid-tec®
geprüfte Oberflächentechnik GmbH
Riedstraße 10
D-89616 Rottenacker

T: +49 7393 / 918 39 10
F: +49 7393 / 918 39 19
E: info@haid-tec.de

www.haid-tec.com
shop.haid-tec.com/



The further development of our cleaning pads was funded by the Federal Ministry for Economic Affairs and Energy based on a resolution of the German Bundestag.

Supported by the



Bundesministerium
für Wirtschaft
und Energie